

.

FIG.2

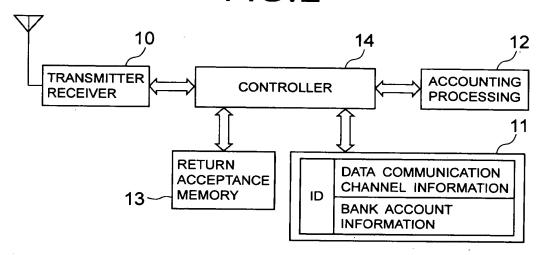


FIG.3

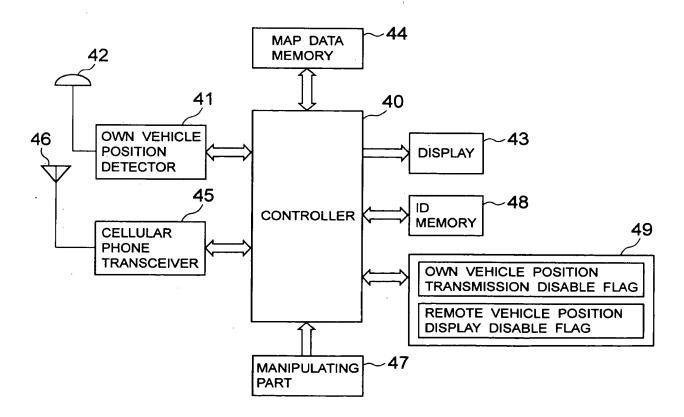


FIG.4

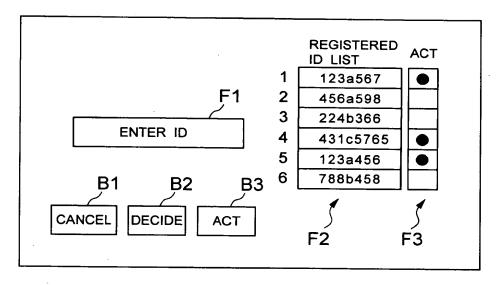


FIG.5

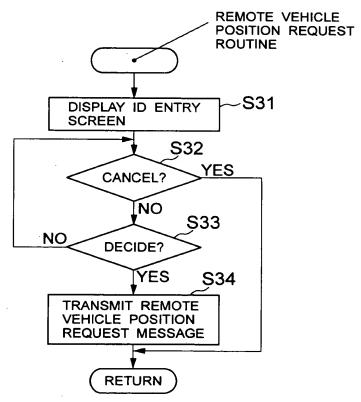


FIG.6

REMOTE VEHICLE POSITION REQUEST MESSAGE

OPR	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID

OPR: REMOTE VEHICLE POSITION REQUEST CODE

FIG.7


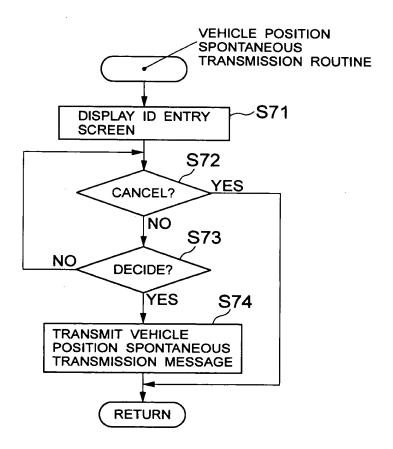


FIG. 8

VEHICLE POSITION SPONTANEOUS
TRANSMISSION MESSAGE

Tao	ORIGINATING	DESTINATION	DESTINATION VEHICLE POSITION
5	VEHICLE ID	VEHICLE ID	INFORMATION

CPT: VEHICLE POSITION SPONTANEOUS TRANSMISSION CODE

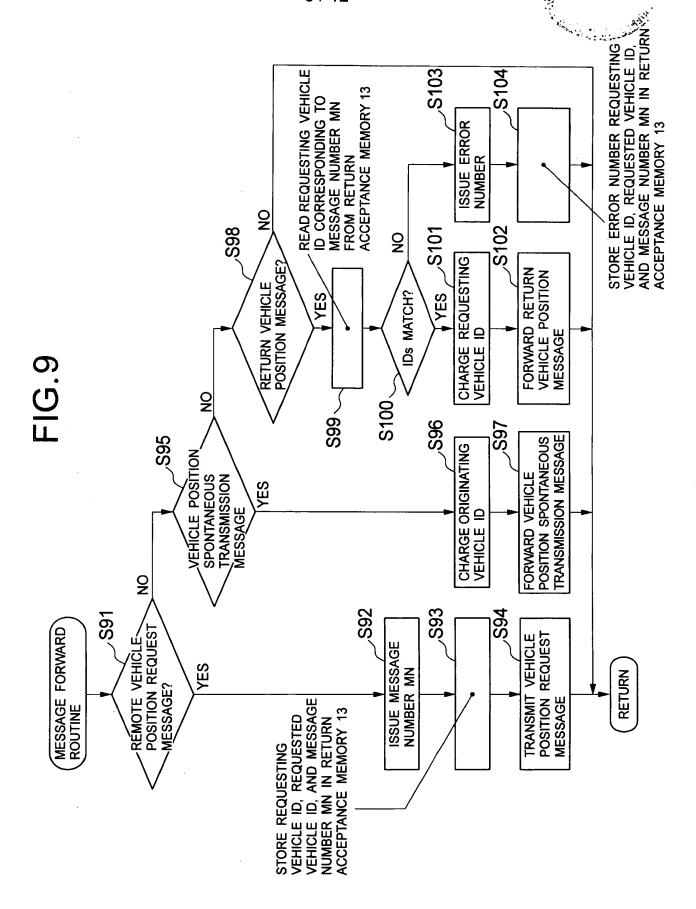



VEHICLE POSITION REQUEST MESSAGE

CPR REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER
---------------------------	-------------------------	-------------------

CPR: VEHICLE POSITION REQUEST CODE

FIG.11

RETURN VEHICLE POSITION MESSAGE

RCP	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER MN	VEHICLE POSITION INFORMATION

RCP: RETURN VEHICLE POSITION CODE

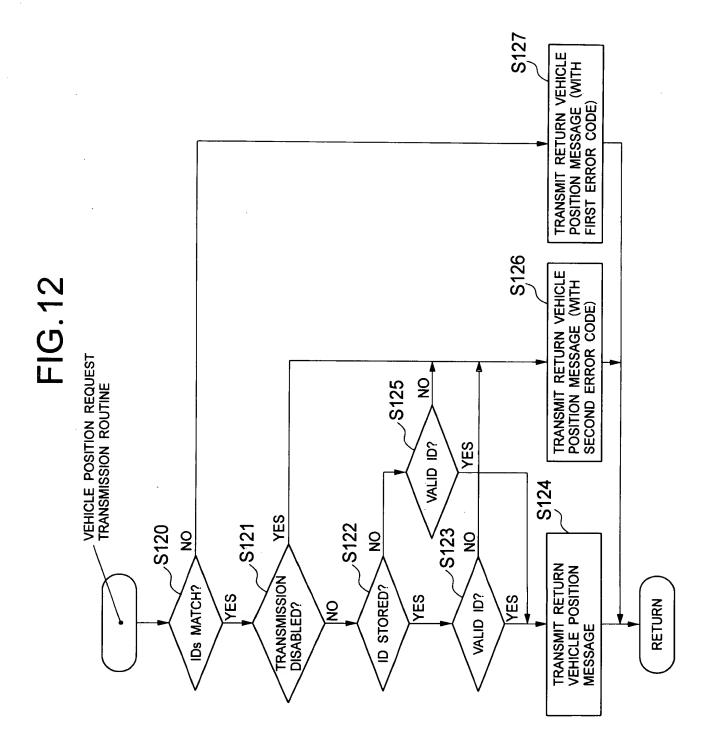


FIG.13

RETURN VEHICLE POSITION MESSAGE

RCP	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER MN	ERR1
-----	--------------------------	-------------------------	----------------------	------

RCP: RETURN VEHICLE POSITION CODE

ERR1: FIRST ERROR CODE

FIG. 14

RETURN VEHICLE POSITION MESSAGE

RCP: RETURN VEHICLE POSITION CODE

ERR2: SECOND ERROR CODE

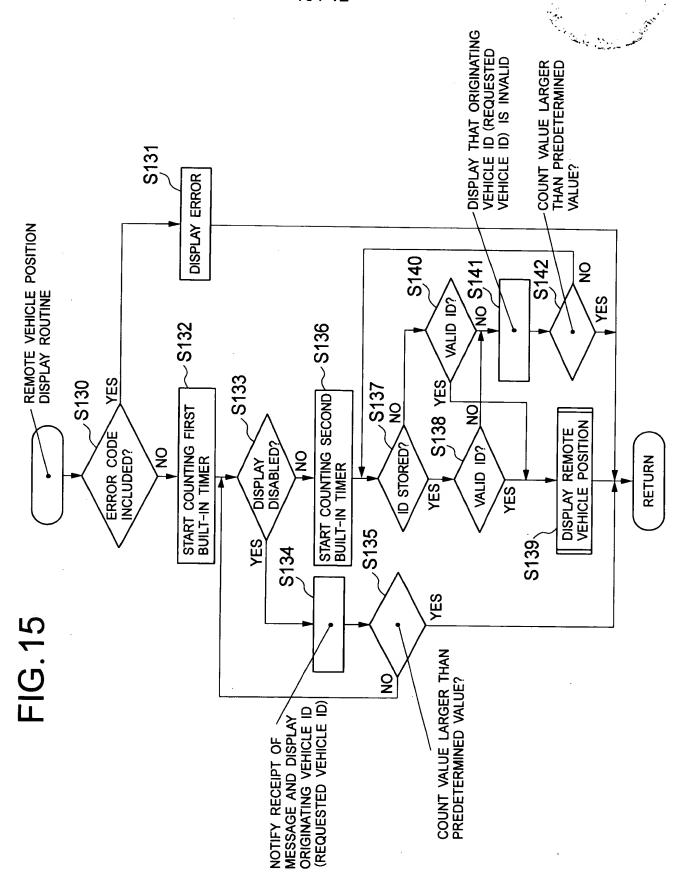


FIG. 16

(REMOTE VEHICLE POSITION DISPLAY MODE)

